




## Parking Brake Handle & Cable Installation Instructions

1. Install cable and clevis assembly as shown in picture to the right. Do not install cotter pin yet.

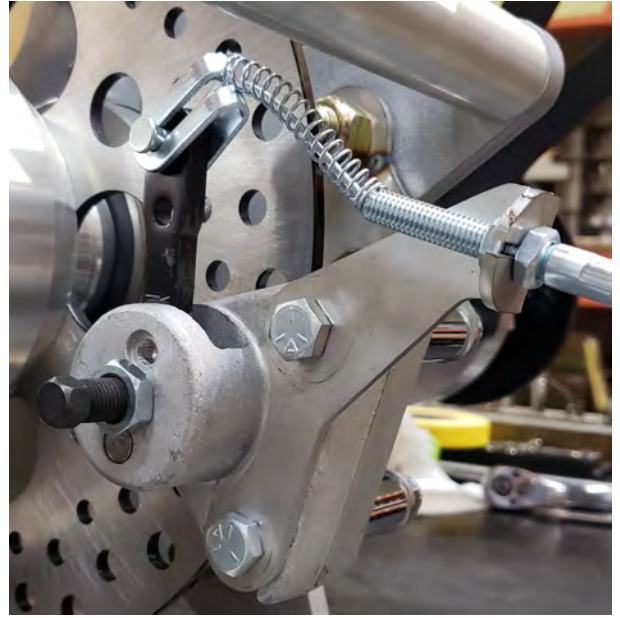

2. Bolt handle to fender. Route cable from caliper to handle and mark the desired length on the cable housing as shown in picture to the right, with tape. Smooth arc. Do not crip the cable housing.



3. Cut barrel end off of cable and remove housing from cable. Cable needs to be longer than the housing. **Do not cut the cable now. Remove housing from the cable.** Use an abrasive cut off wheel to cut the housing. **Do not Smash the housing**





## **Parking Brake Handle & Cable Installation Instructions**

4. After housing is cut to length, reinsert cable through housing. Install cable and housing assembly to the caliper. This time using the supplied cotter pin, shown in step 1.



5. Route the cable and trimmed end of the housing to the handle. Locate the housing locator and thread the cable up through the handle (arrow)






## **Parking Brake Handle & Cable Installation Instructions**

6. Slide the cable clamp over the cable down to the handle. (circle)



7. Have a friend pull the cable tight up through the handle while you tighten the cable clamp. Two 5/16" wrenches required.

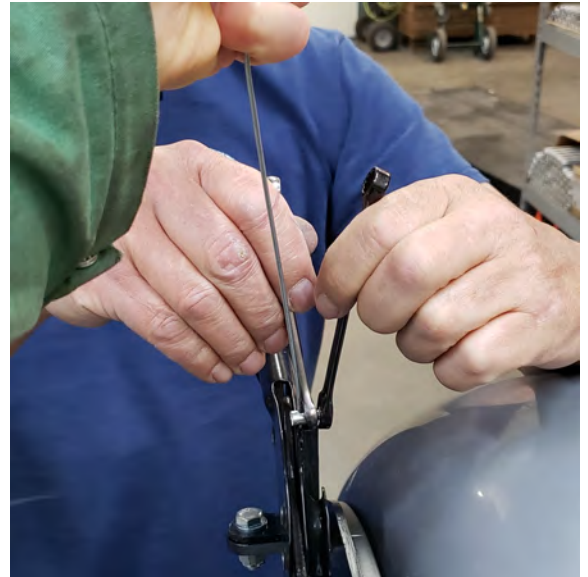

8. Use the cable adjuster to take up the slack in the housing.





## **Parking Brake Handle & Cable Installation Instructions**

9. Lift the parking brake handle to test the brake. Adjust until the parking brake holds. Release the handle and make sure the caliper releases.



10. Trim excess cable about 4" from cable clamp and loop back down through the handle for future adjustments.

